


How the narrow strips are fixed

LEFT meeting stile - top view - cuts / layout: cm; stock / hardware: imperial

T1 decorative trim P1 + P2 outside plywood F1 timber

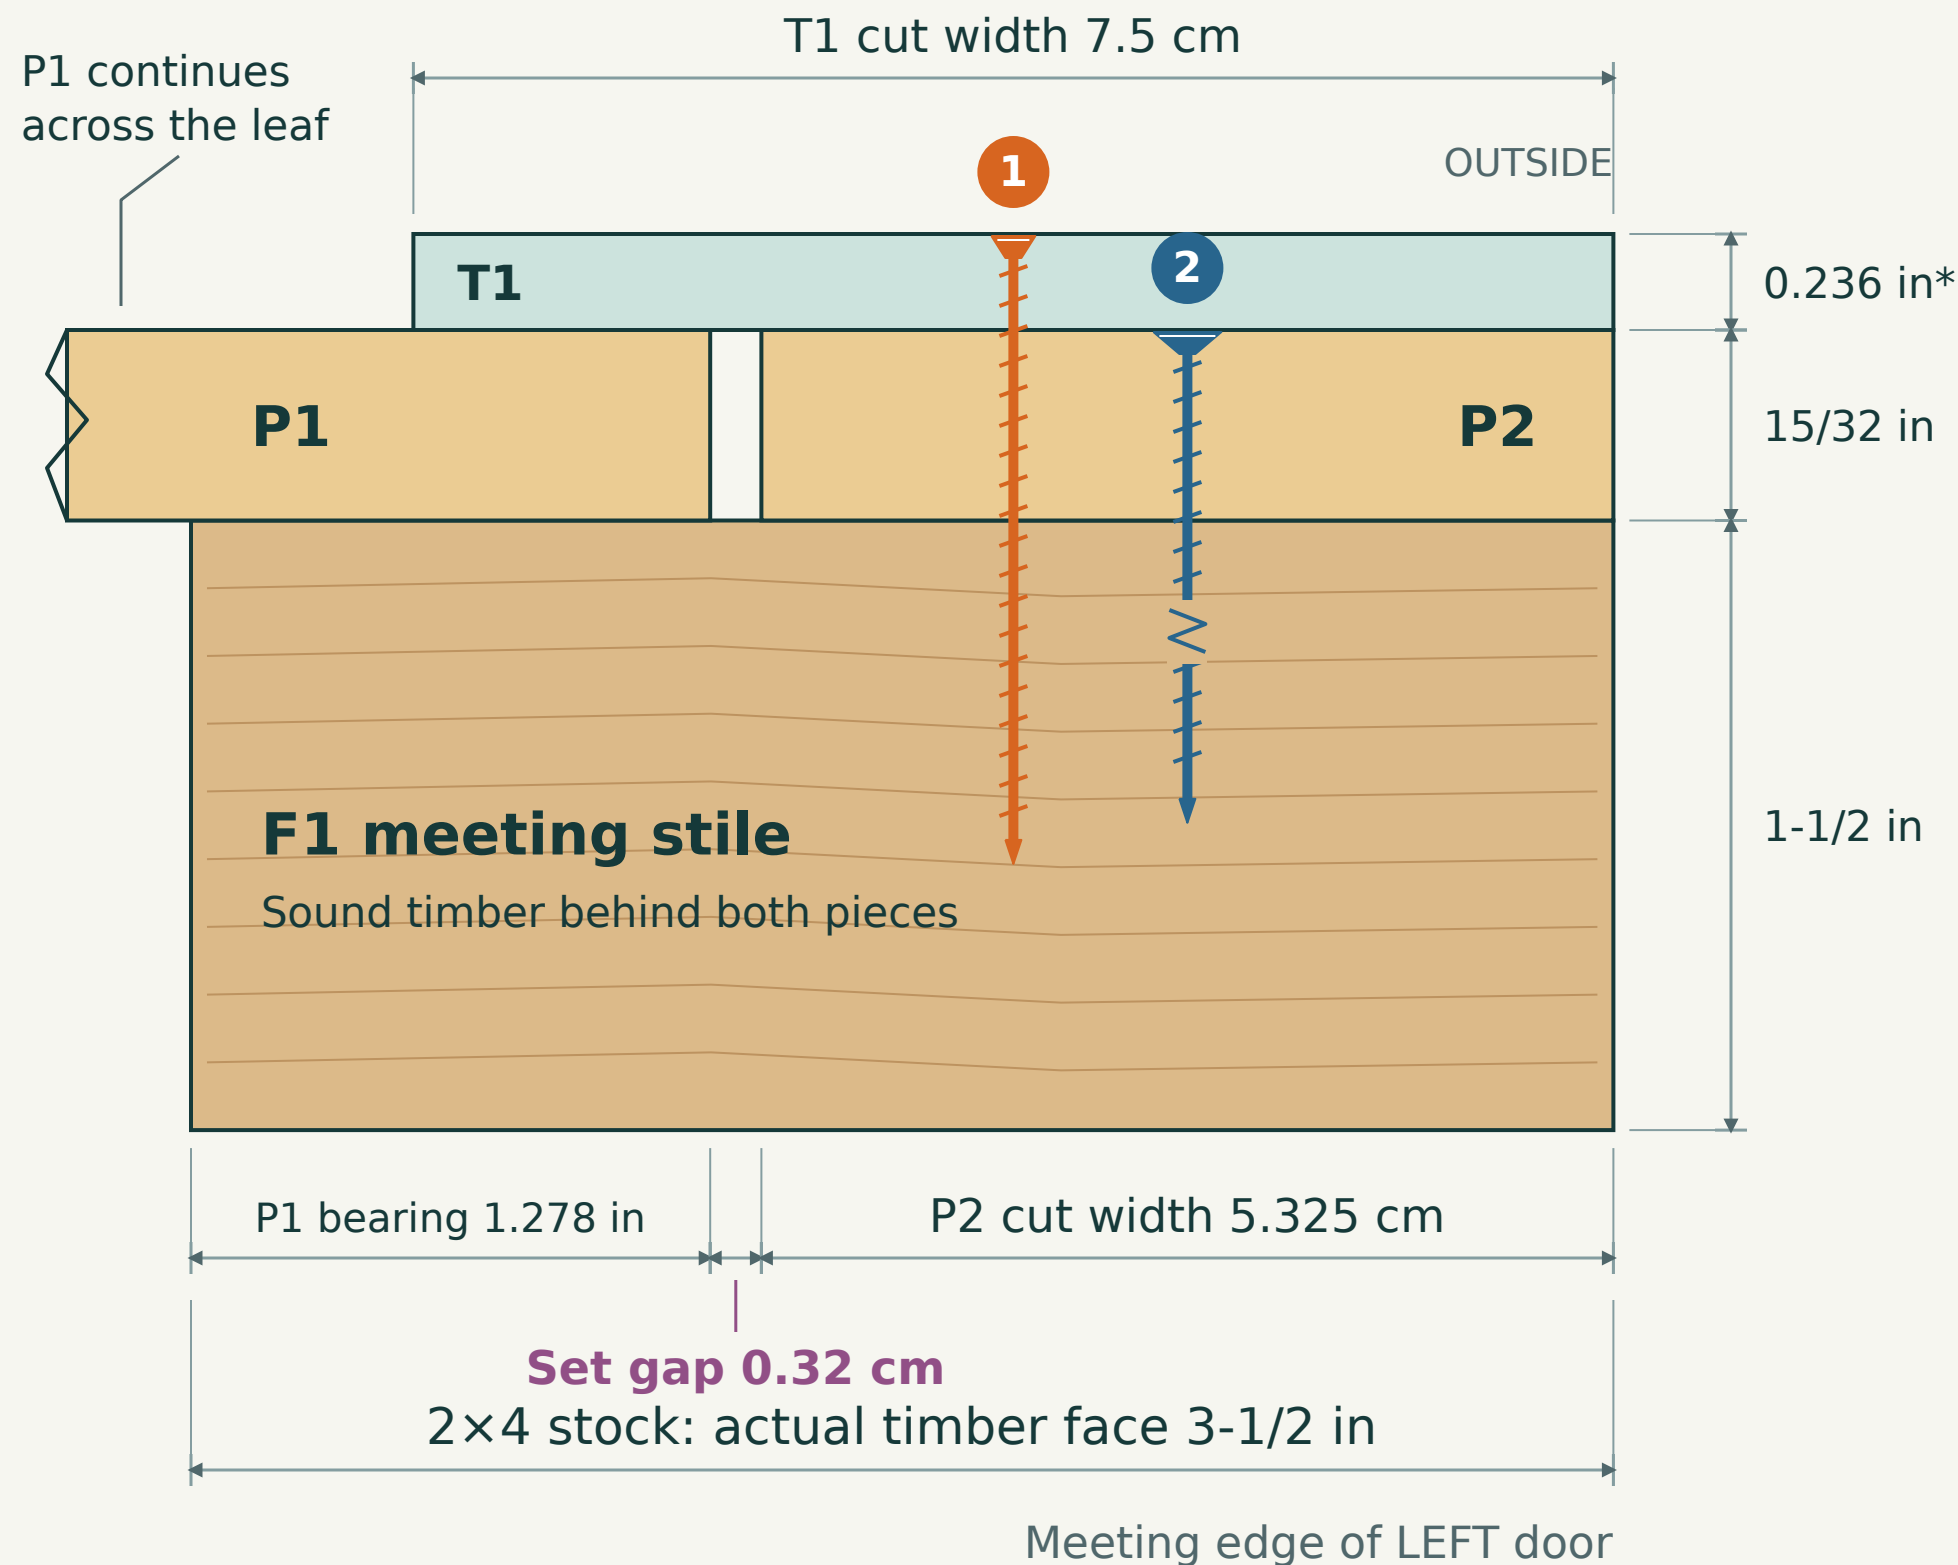

1 T1 finish screw

GRK #8 × 1-1/2 in; T10.
Drawing length: 1.55 in.
Geometric reach: 0.845 in.
Axis: 3.75 cm from leaf edge.
Pilot/countersink: test in your actual thin trim first.

2 P2 screw before trim

Broad bearing head; set flush.
Do not crush the plywood.
Axis: 2.663 cm from leaf edge.
Select length for actual fixing.
Offset from the T1 screws along the strip's height.

Keep the seam free

Do not rigidly glue T1 to both plywood pieces.
The 0.32 cm gap remains behind the decorative trim.
P2 screw length is schematic.

Screw paths are offset along height; this schematic section shows both paths together.
*Trim is 0.236 in in this model; verify actual stock (not exactly 1/4 in). Screw profile is illustrative; follow the screw maker.